

## TEAR

Příslušenství k lištovému systému



TEAR PR-WH

TEAR PR-WH	<b>22580</b>
TEAR PR-90A-WH	<b>22581</b>
TEAR PR-90B-WH	<b>22582</b>
TEAR PR-CORD-WH	<b>22583</b>
TEAR PR-FLEX-WH	<b>22584</b>
TEAR PR-I-WH	<b>22585</b>
TEAR PR-I-B-WH	<b>22586</b>
TEAR PR-PLUG-WH	<b>22587</b>
TEAR PR-T-LLR-WH	<b>22589</b>
TEAR PR-T-RRL-WH	<b>22590</b>
TEAR PR-X-WH	<b>22591</b>
TEAR TR 2M-WH	<b>22593</b>



TEAR PR-WH



TEAR PR-90A-WH



TEAR PR-90B-WH



TEAR PR-CORD-WH

## TEAR

### Příslušenství k lištovému systému



TEAR PR-FLEX-WH



TEAR PR-I-WH



TEAR PR-I-B-WH



TEAR PR-PLUG-WH



TEAR PR-T-LLR-WH




TEAR PR-T-RRL-WH




TEAR PR-X-WH




TEAR TR 2M-WH

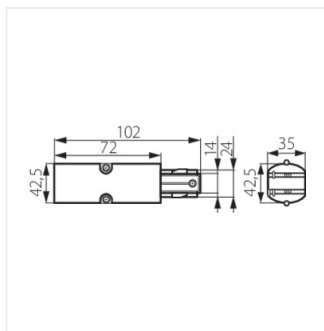


TEAR PR-WH

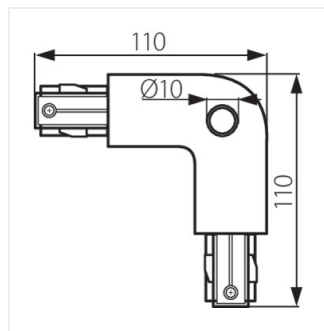


TEAR PR-90A-WH

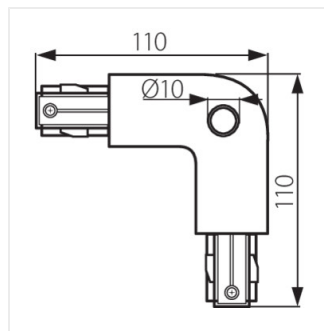


TEAR PR-90B-WH

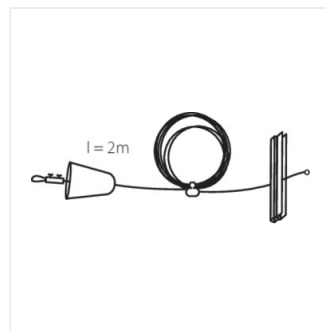


TEAR PR-CORD-WH

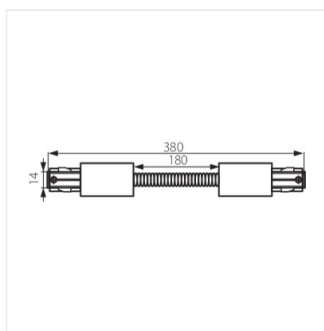


TEAR PR-FLEX-WH

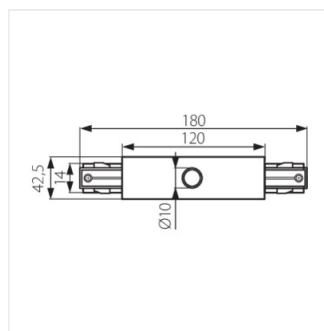

TEAR PR-I-WH

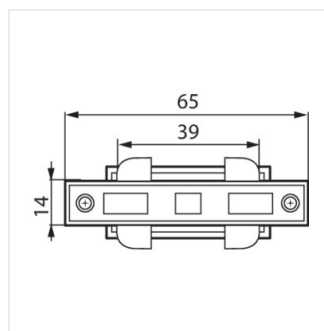


TEAR PR-I-B-WH

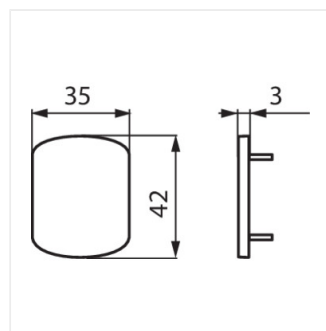


TEAR PR-PLUG-WH

## TEAR


### Příslušenství k lištovému systému

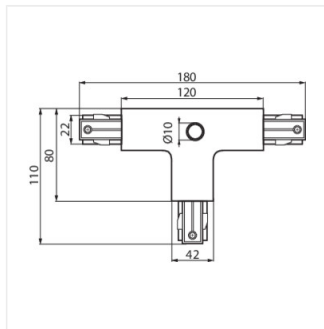


TEAR PR-T-LLR-WH

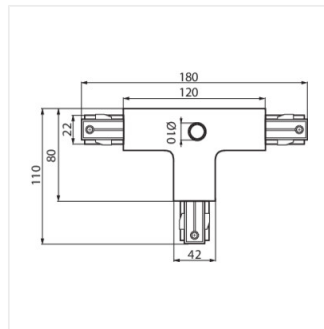


TEAR PR-T-RRL-WH

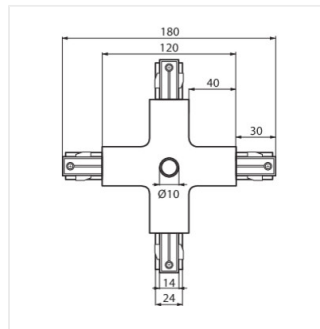

TEAR PR-X-WH


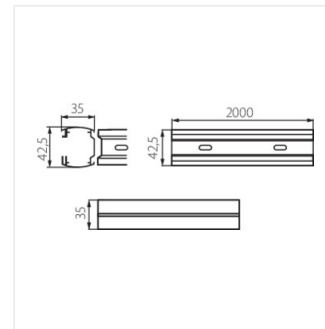


TEAR TR 2M-WH

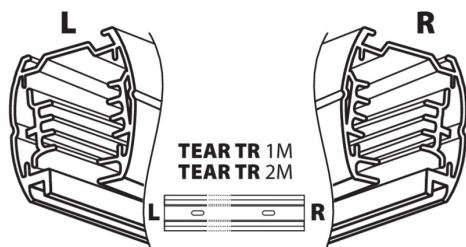

TEAR TR 1M  
TEAR TR 2M


**N** —

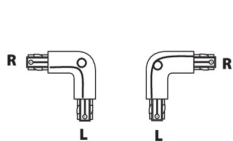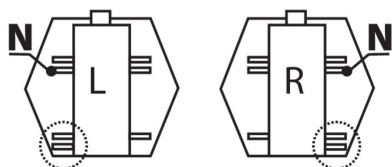


TEAR PR-90A



 
TEAR PR-90B




TEAR PR-T-LLR

 


TEAR PR-T-RRL

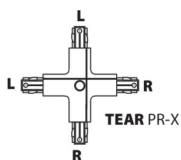

TEAR PR-X

 

TEAR PR

 

TEAR PR-I



TEAR PR-I-B

## TEAR

### Příslušenství k lištovému systému

