

DOMO 01-1030

Zvonkové tlačítko



DOMO 01-1030-202 bi



DOMO 01-1030-202 bi	24716	bílá
DOMO 01-1030-203 kr	24776	krémová
DOMO 01-1030-243 sr	24835	stříbrná
DOMO 01-1030-241 gr	24894	grafit
DOMO 01-1030-230 pe	24953	perleťově bílá
DOMO 01-1030-250 sz	25012	šampaňská

- Materiál: PC
- Plast: PC

DOMO 01-1030

Zvonkové tlačítko



DOMO 01-1030-202 bi



DOMO 01-1030-203 kr



DOMO 01-1030-243 sr




DOMO 01-1030-241 gr




DOMO 01-1030-230 pe



 
DOMO 01-1030-250 sz

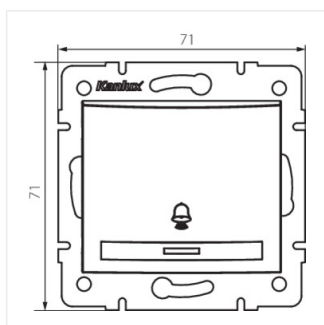


DOMO 01-1030-202 bi

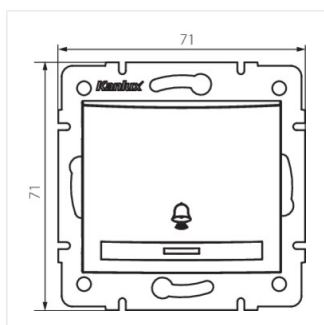 

DOMO 01-1030-203 kr

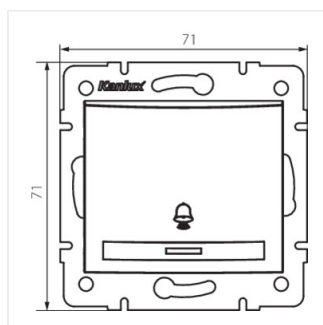 


DOMO 01-1030-243 sr

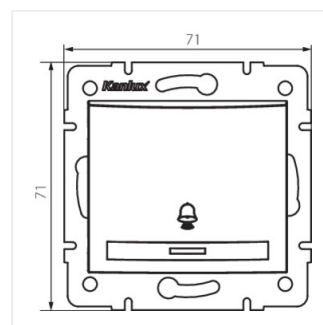 


DOMO 01-1030-241 gr

DOMO 01-1030

 Zvonkové tlačítko

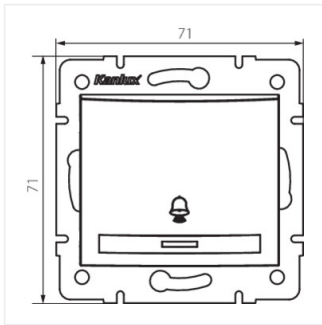

DOMO 01-1030-230 pe

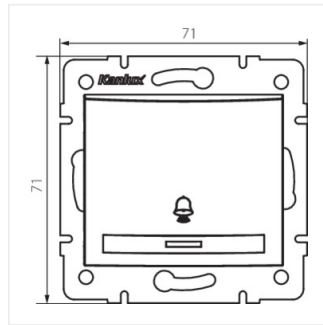 

DOMO 01-1030-250 sz